

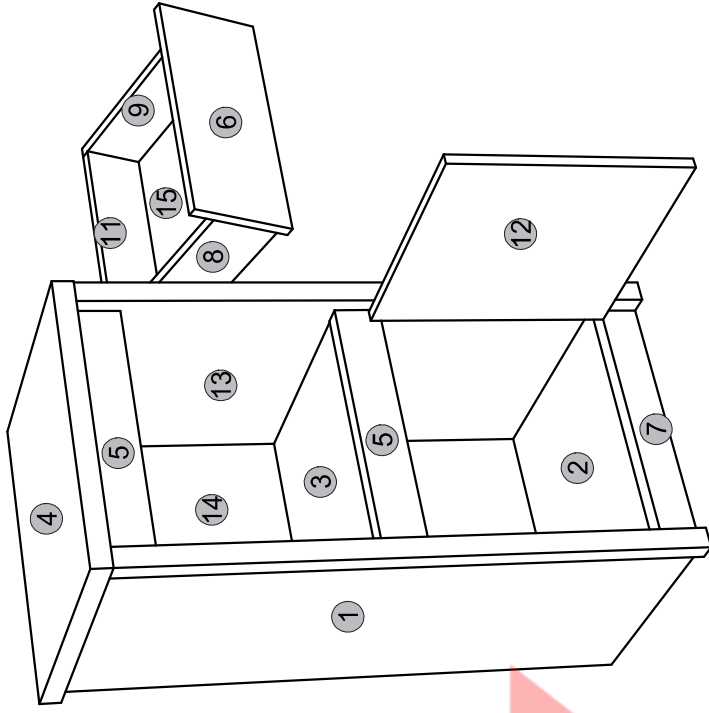
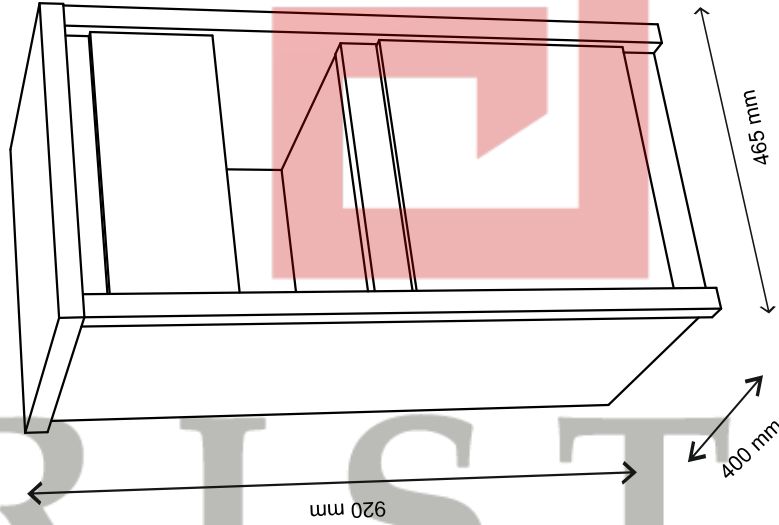
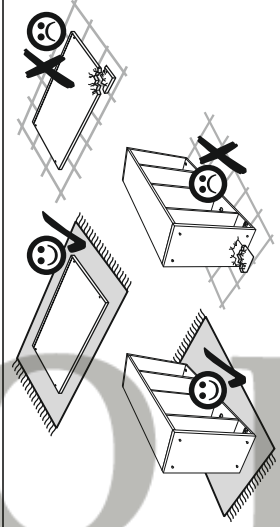
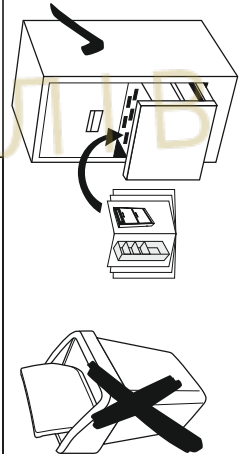
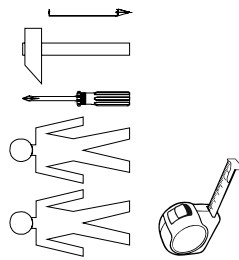
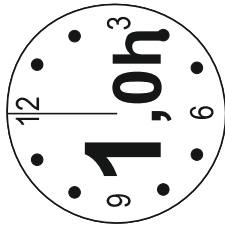
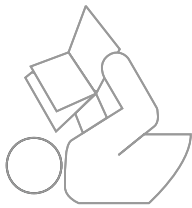


# Instalation manual


NORTON: KOM\_1D1S\_HW




Element symbol	Dimensions	Code	Package
1	884 398 16/32	1 N-011	1/1
2	398 369 16	1 N-001	1/1
3	398 339 16	1 N-002	1/1
4	464 400 16/32/32	1 N-012	1/1
5	70 398 30	2 N-013	1/1
6	170 392 16	1 N-008	1/1
7	60 398 16	1 N-009	1/1
8	350 110 16	1 N-004	1/1
9	350 110 16	1 N-005	1/1
10	341 110 16	1 N-006	1/1
11	341 110 16	1 N-007	1/1
12	376 392 16	1 N-003	1/1
13	884 398 16/32	1 N-010	1/1
14	849 416 3	1 N-014	1/1
15	355 332 3	1 N-015	1/1

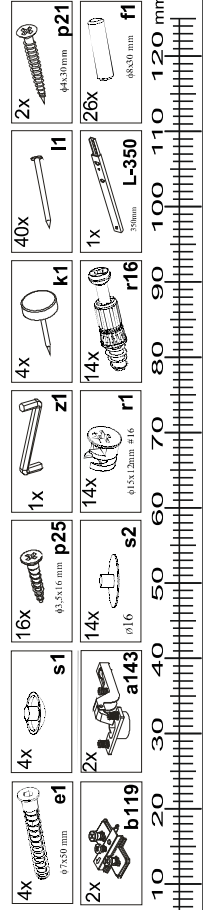


1

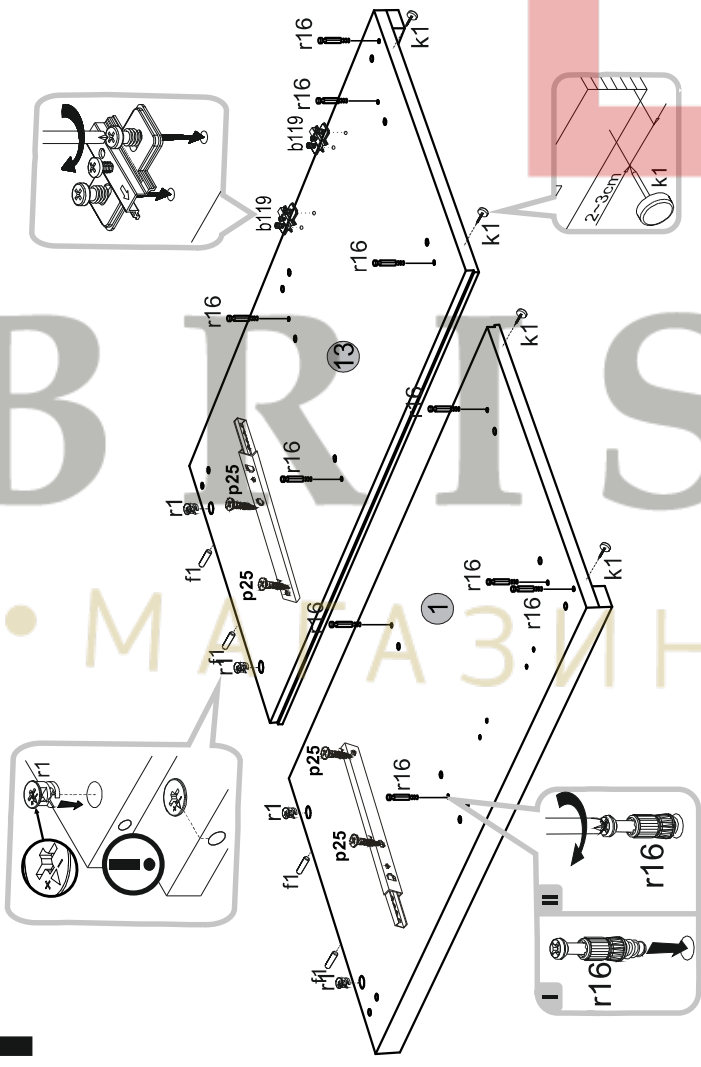


2

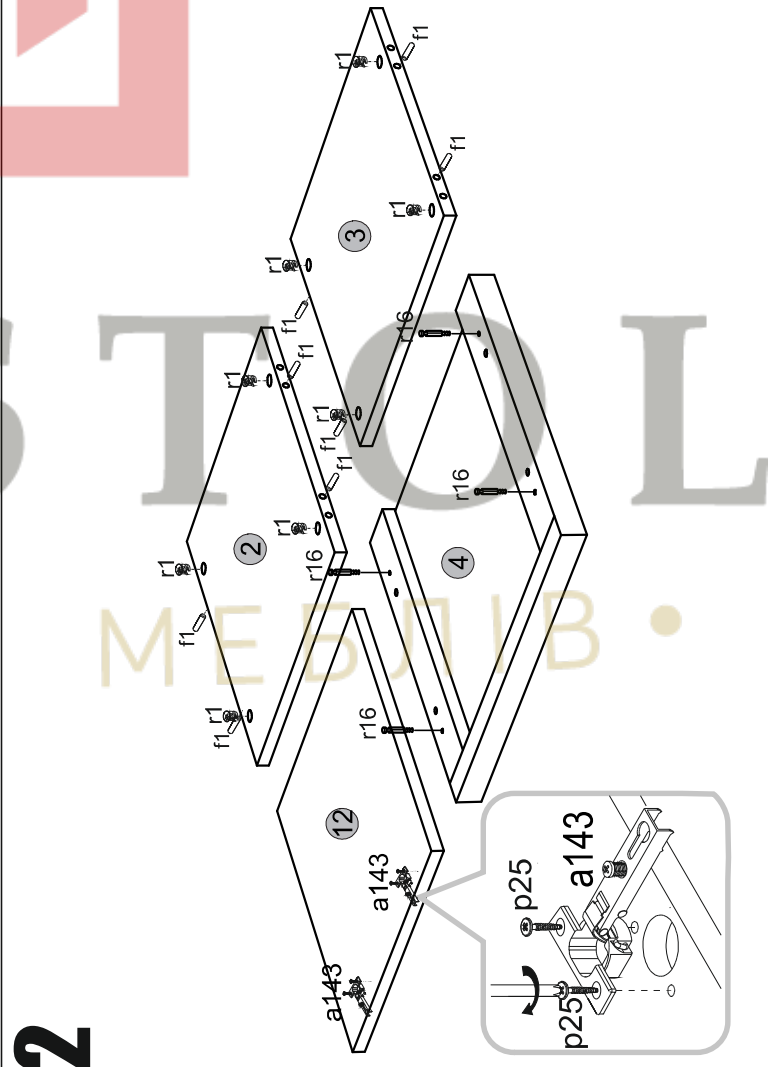


3

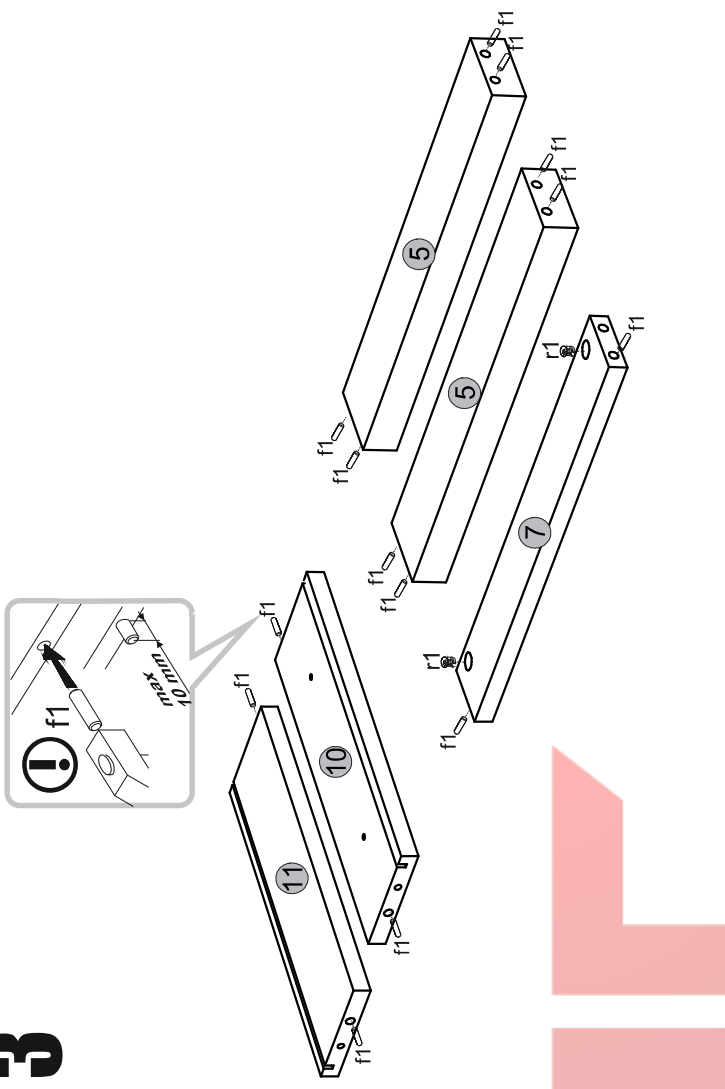


4

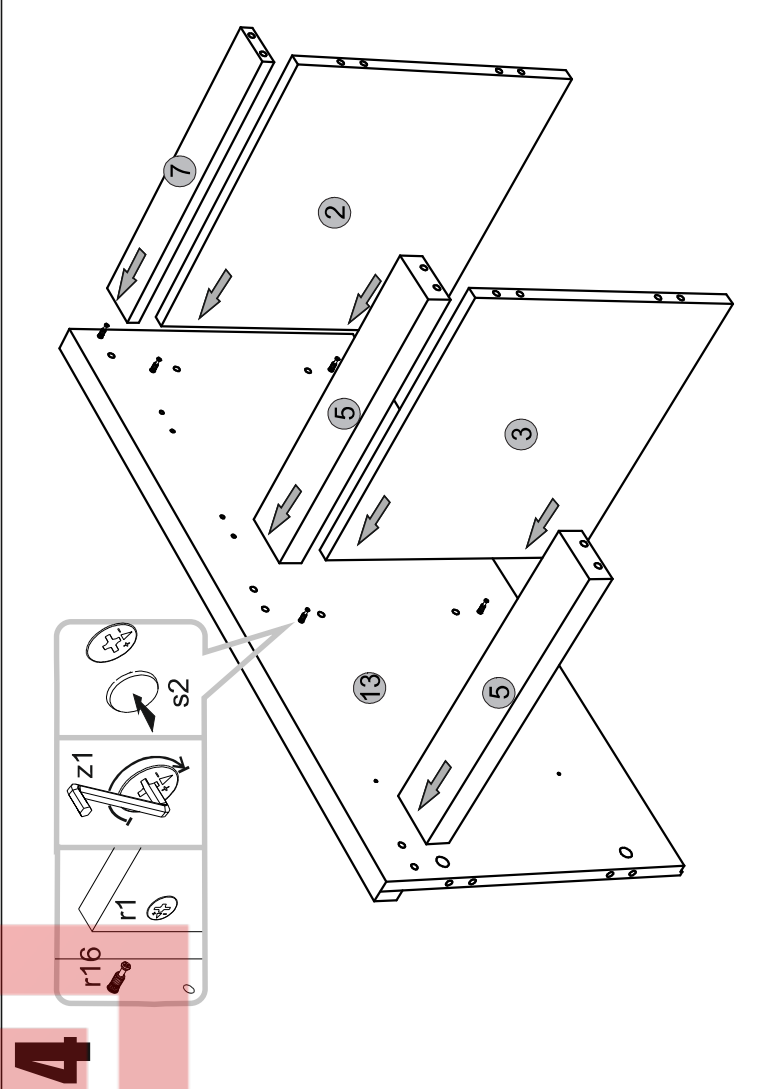

5

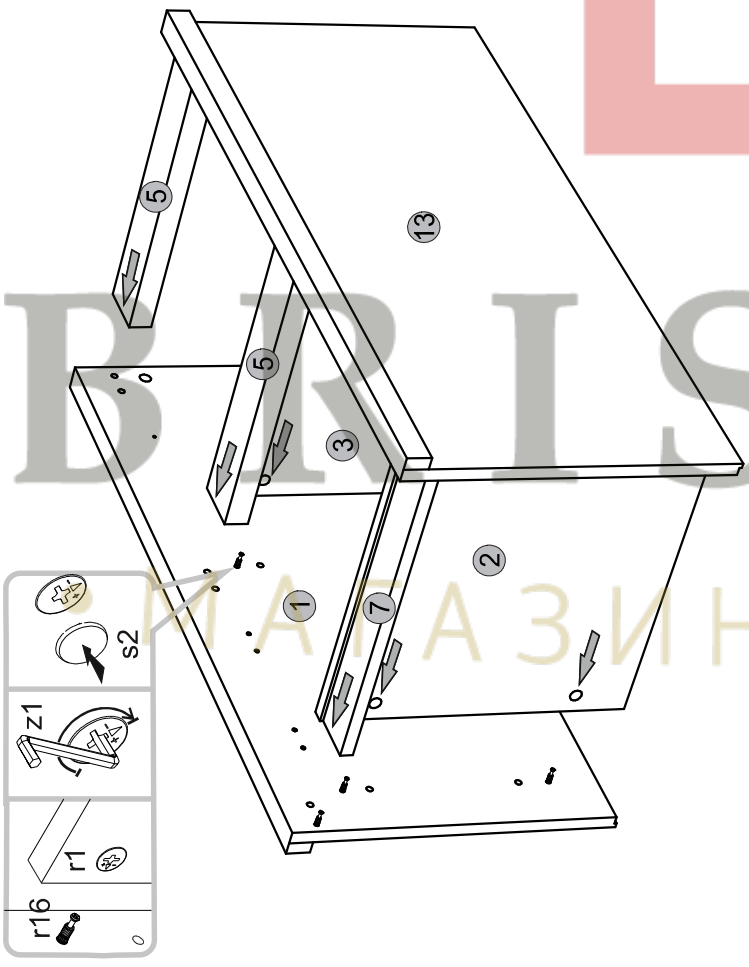


7

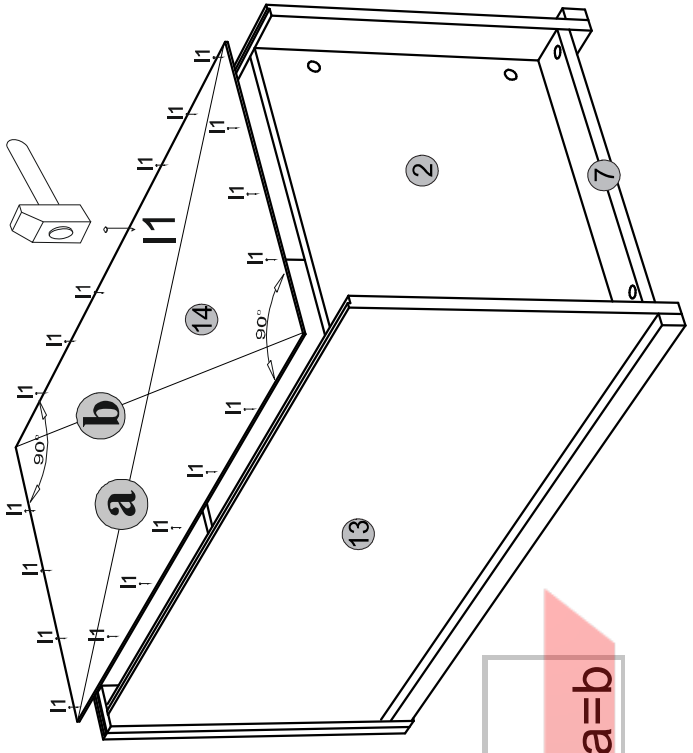


**!**  $a=b$


6

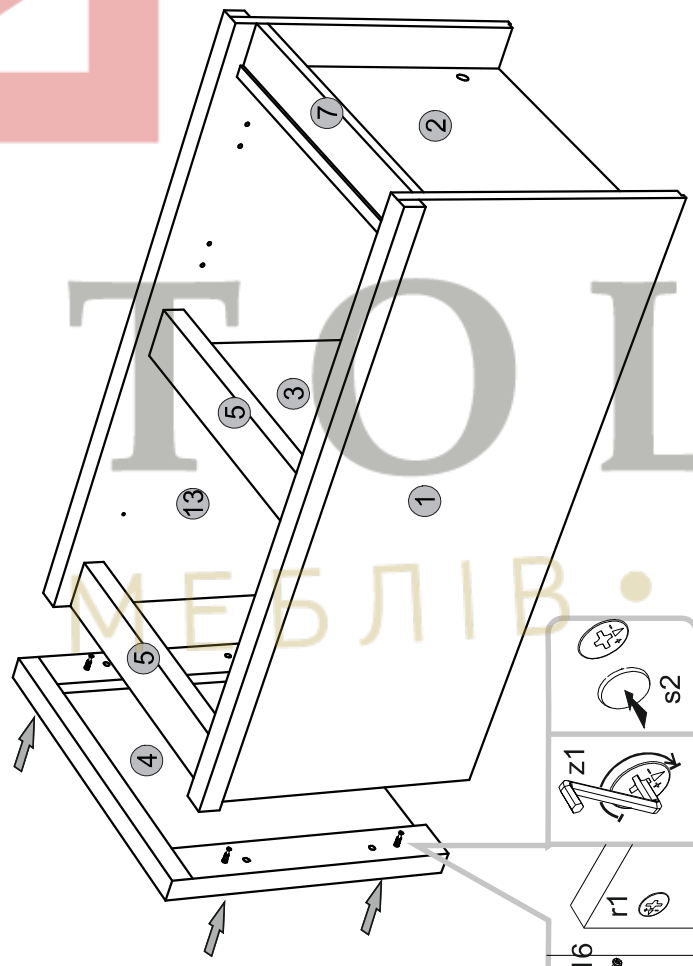


8

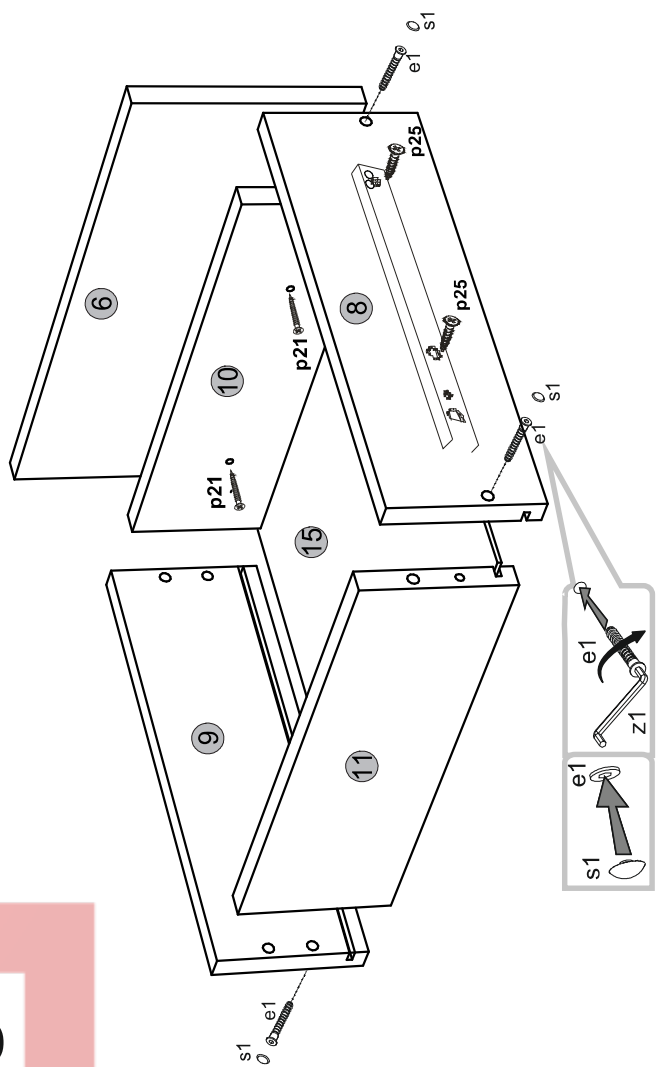

9

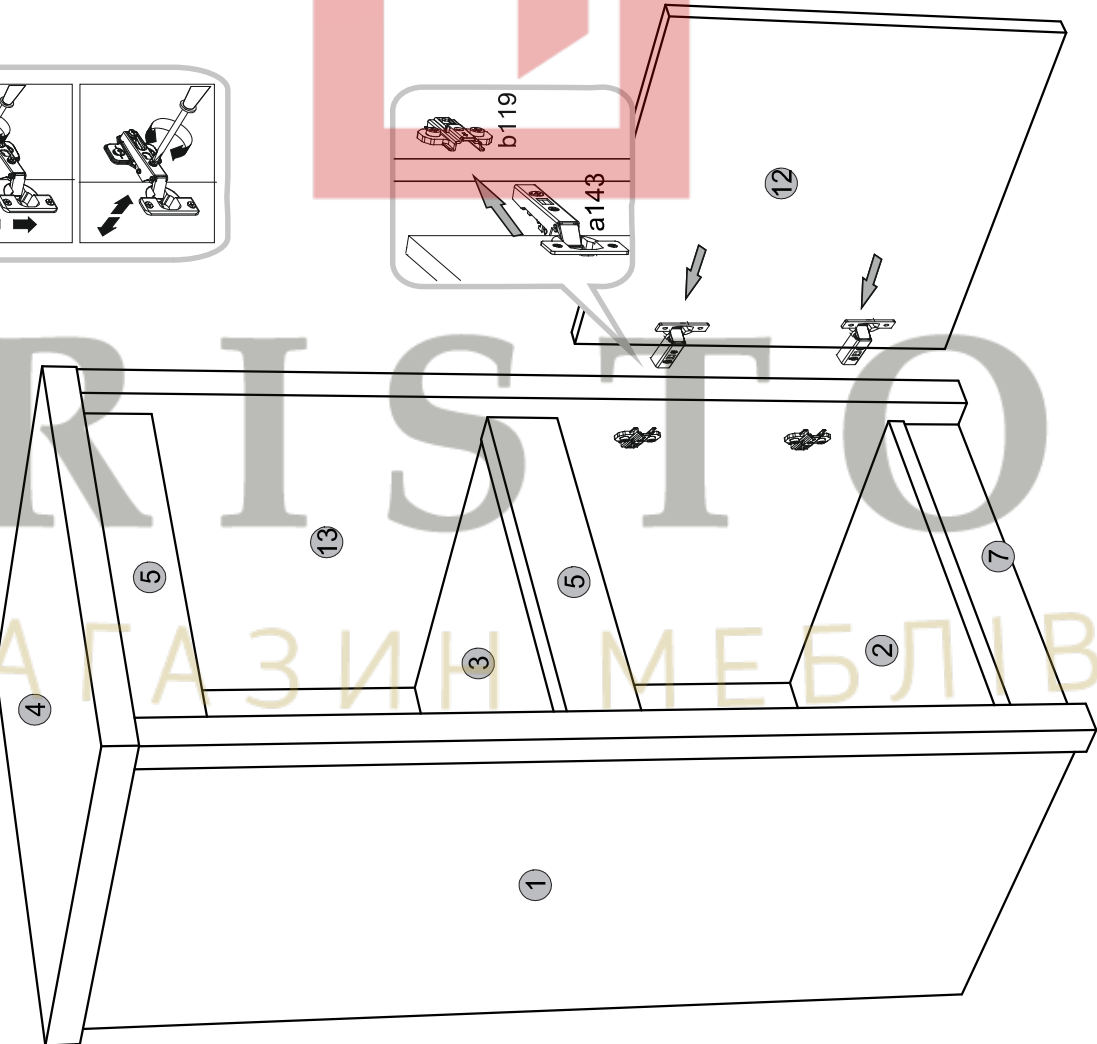

10

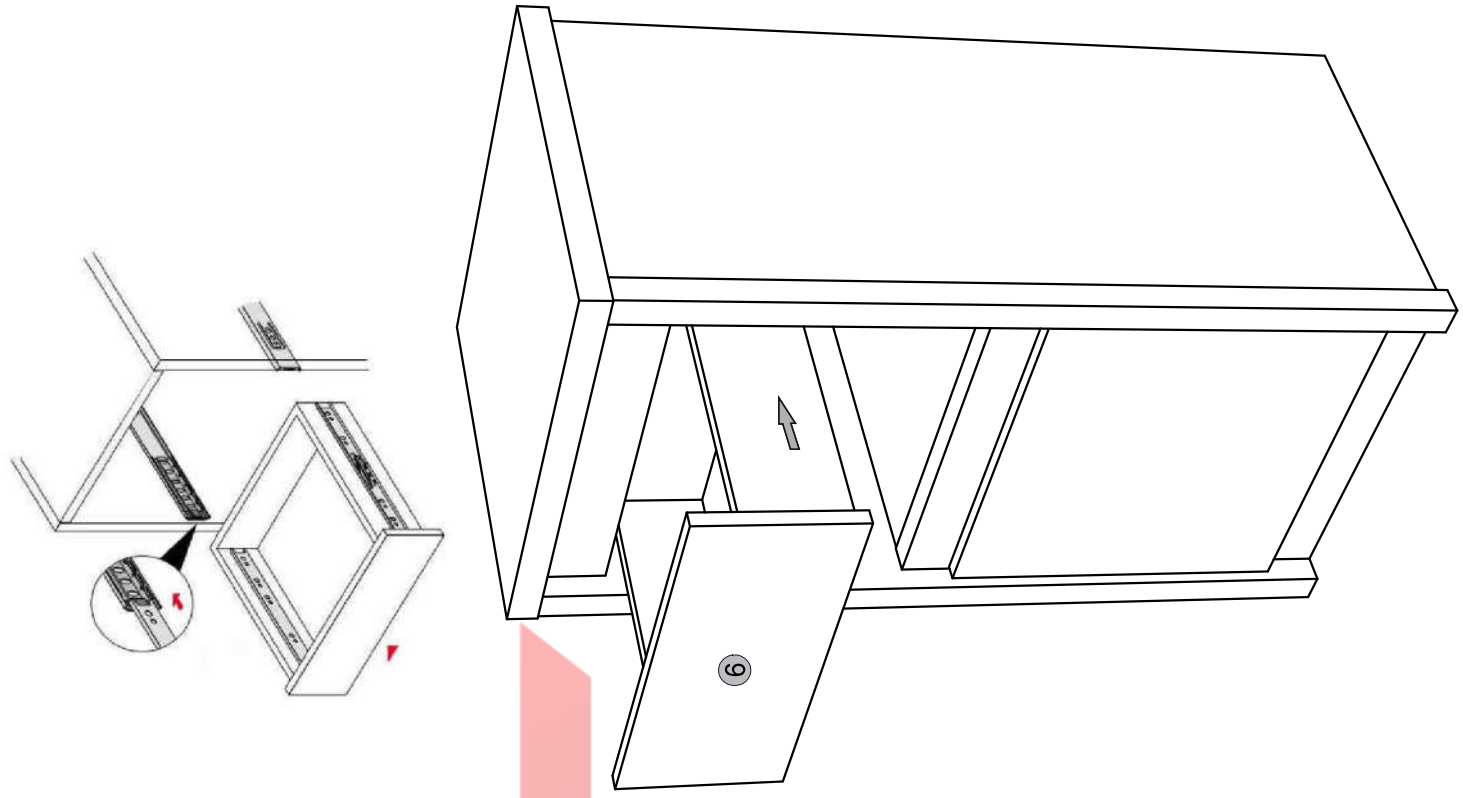

В РІСТІ  
МАГАЗИН МЕБЛІВ