
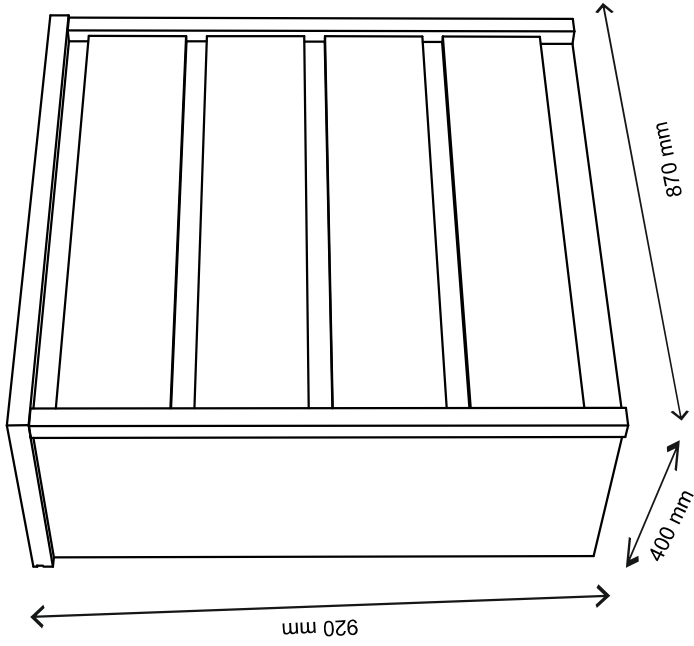
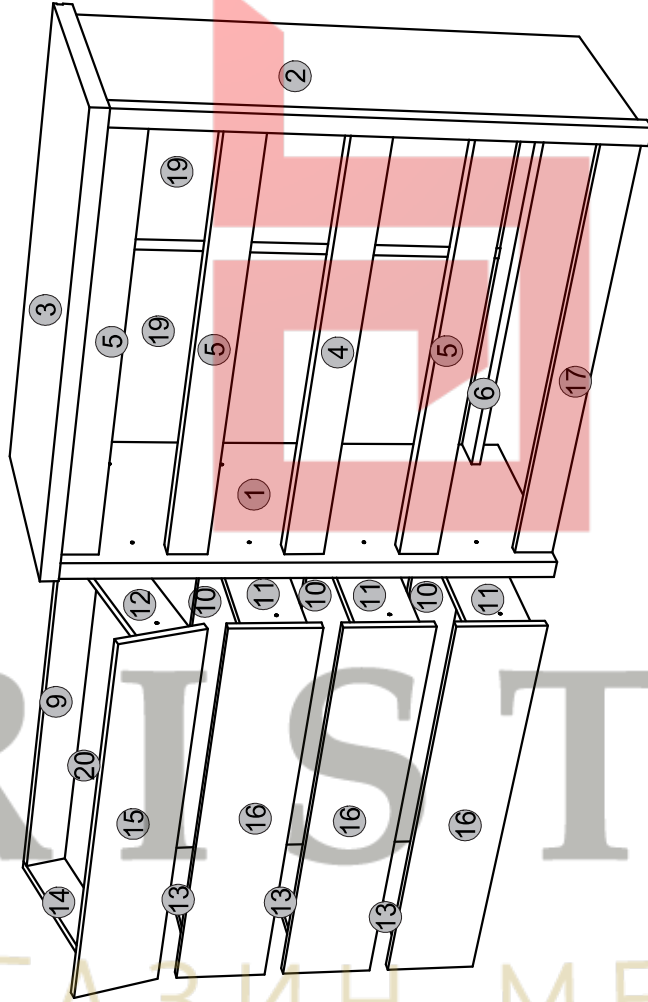
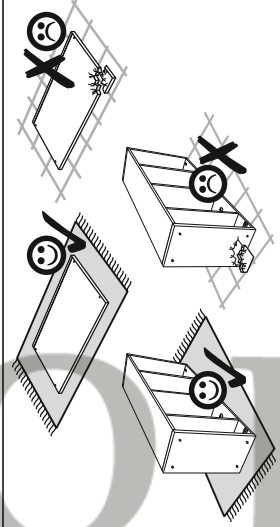
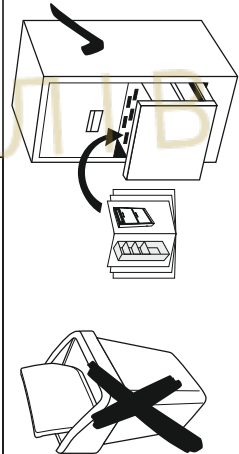
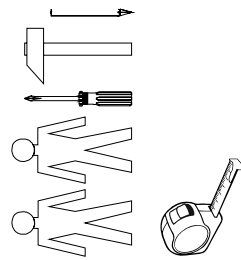
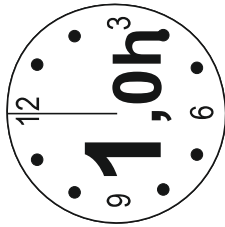



Instalation manual

NORTON: KOM_4S

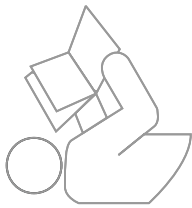


Element symbol	Dimensions			Code	Package
1	884	398	16/32	NK-101	1/1
2	884	398	16/32	NK-102	1/1
3	870	402	16/32/32	NK-201	2/2
4	70	804	30	NK-401	1/1
5	70	804	30	NK-402	1/1
6	804	70	16	NK-403	1/1
7	746	100	16	NK-501	2/2
8	746	120	16	NK-502	2/2
9	746	100	16	NK-503	2/2
10	746	120	16	NK-504	2/2
11	350	120	16	NK-505	2/2
12	350	100	16	NK-506	2/2
13	350	120	16	NK-507	2/2
14	350	100	16	NK-508	2/2
15	170	798	16	NK-001	1/1
16	170	798	16	NK-002	1/1
17	70	804	16	NK-404	1/1
18	60	318	16	NK-405	1/1
19	855	411	3	NK-601	1/1
20	760	332	3	NK-602	2/2


10x r16	10x s1	10x r16	1x z1
24x s1	4x s2	10x s2	10x r1
24x e1	4x p1	32x p25	40x l1
38x f1	8x p21	4x k1	




1

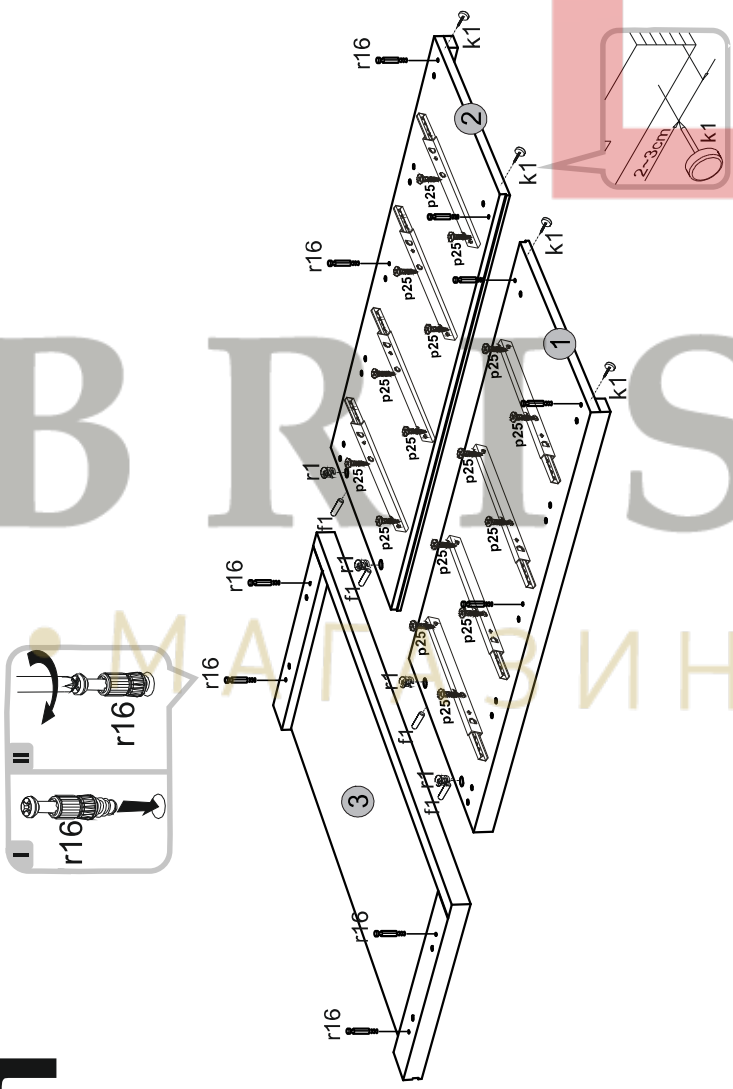


3

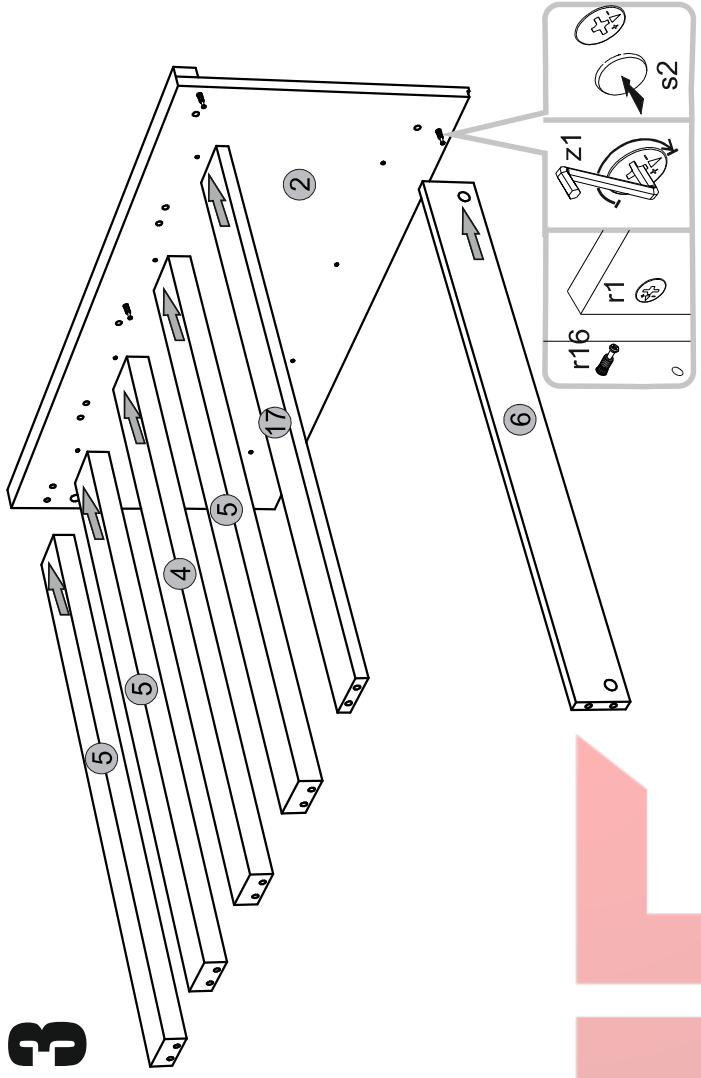

2


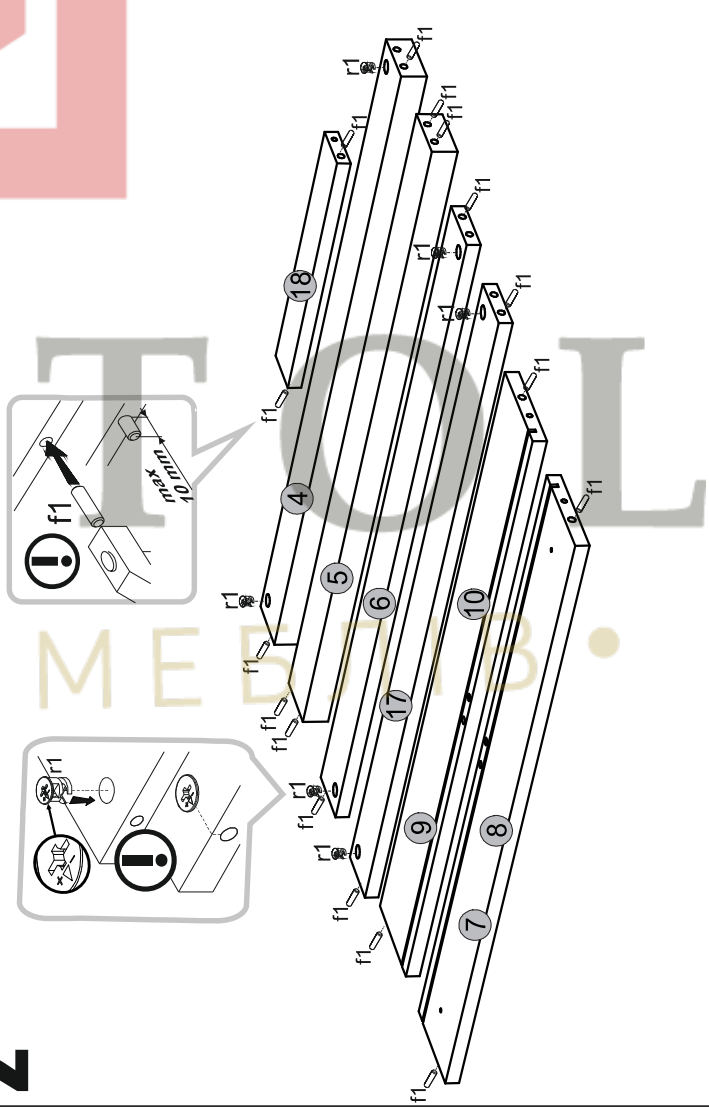


4



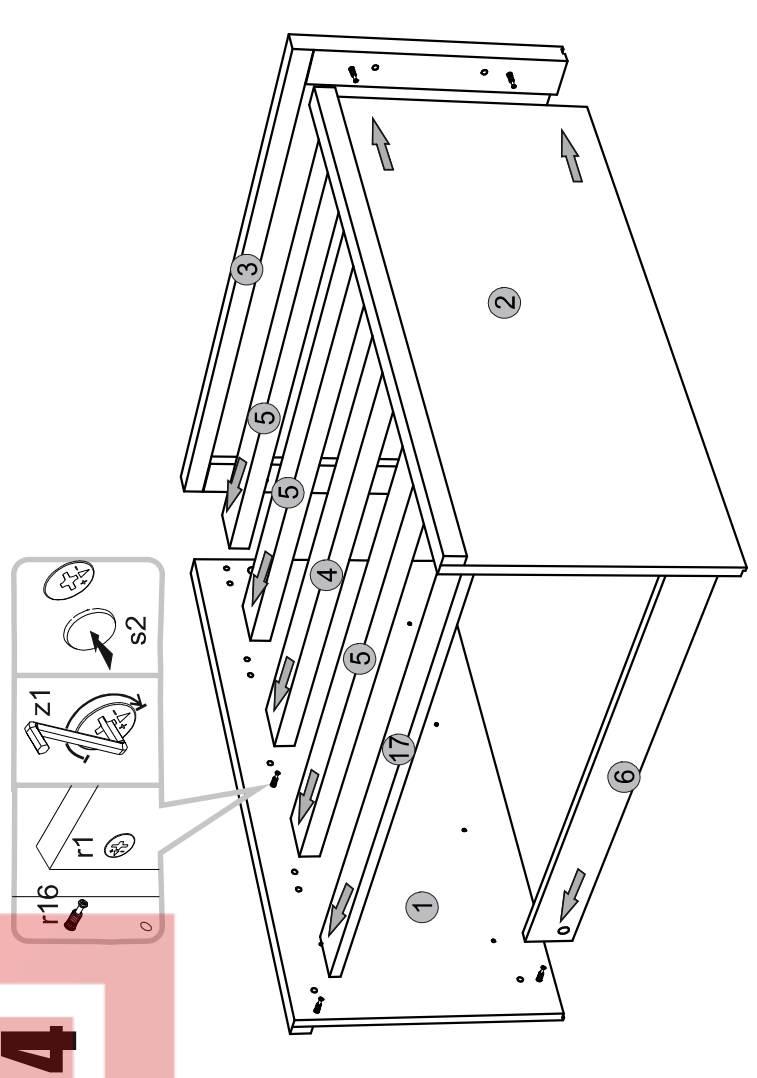


5

! a=b

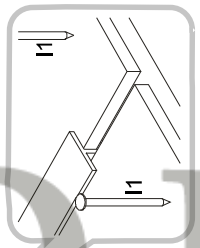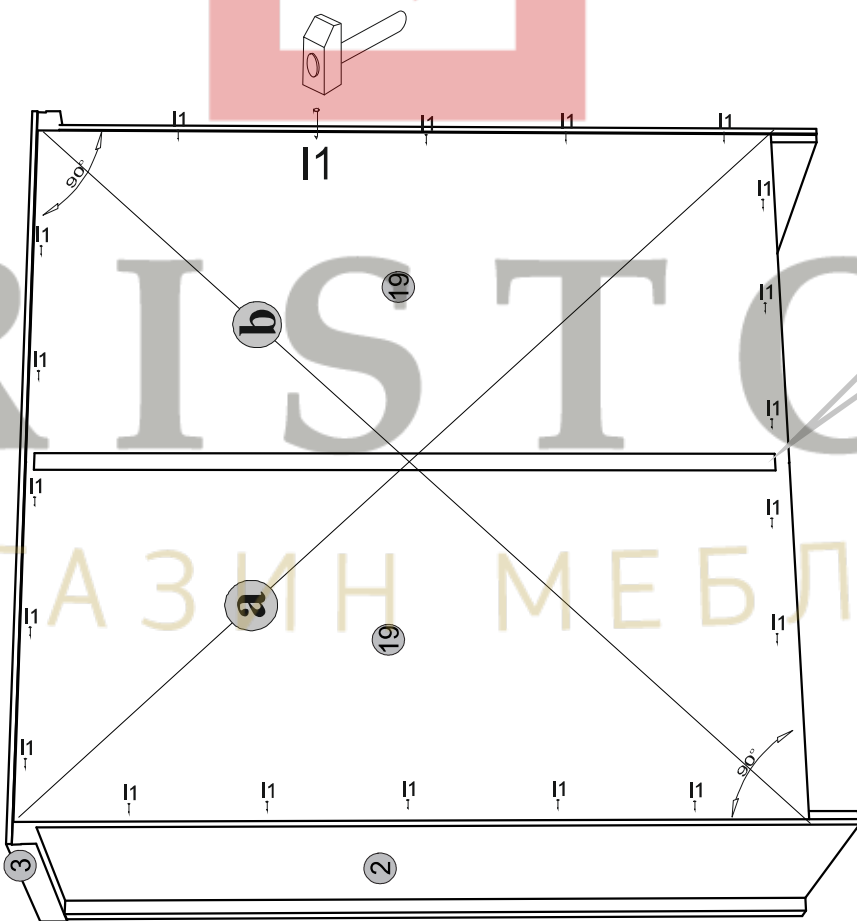

6

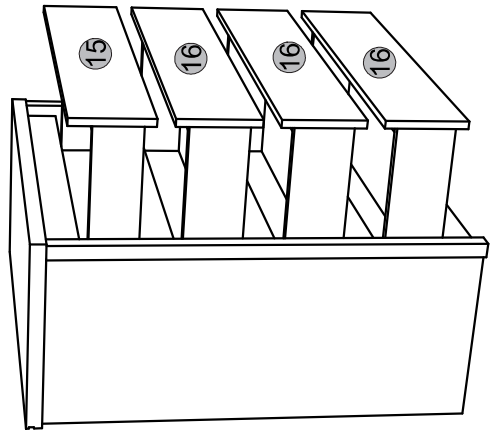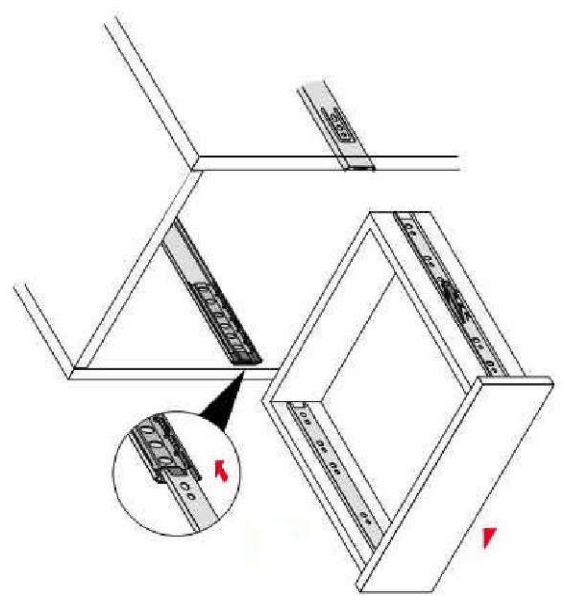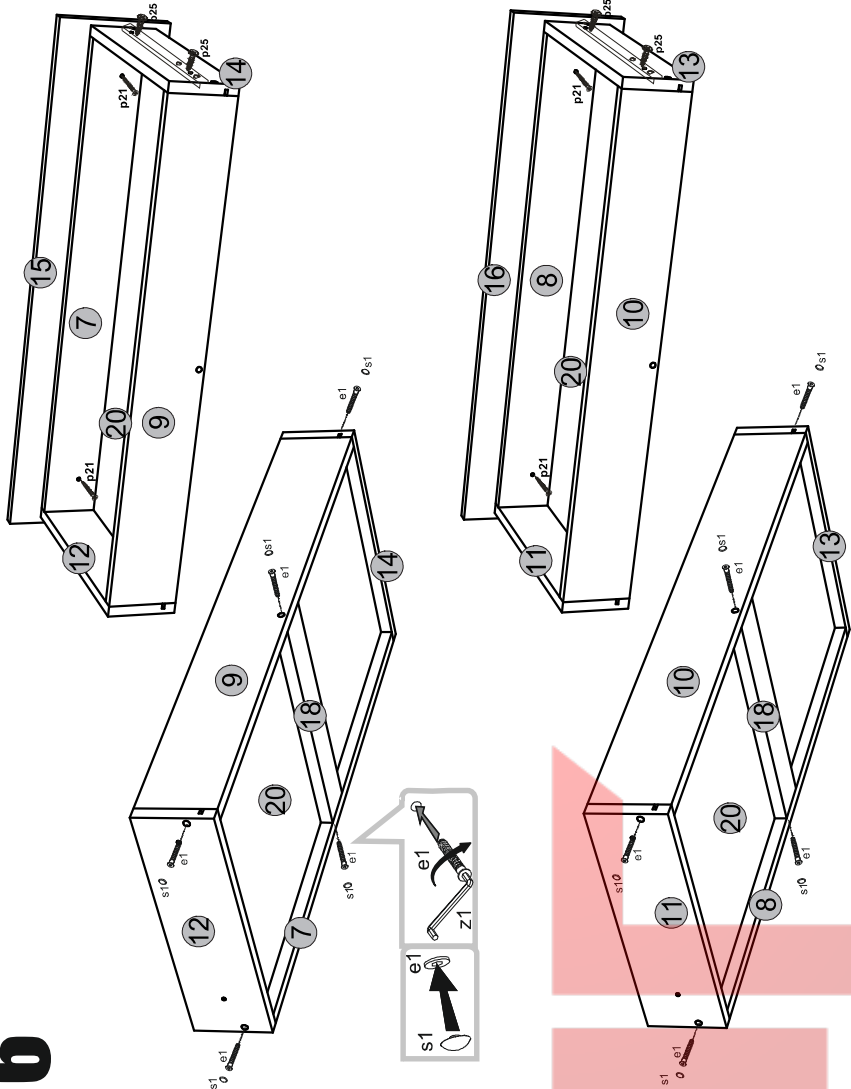

BRISTOL

• МАГАЗИН МЕБЛІВ •