
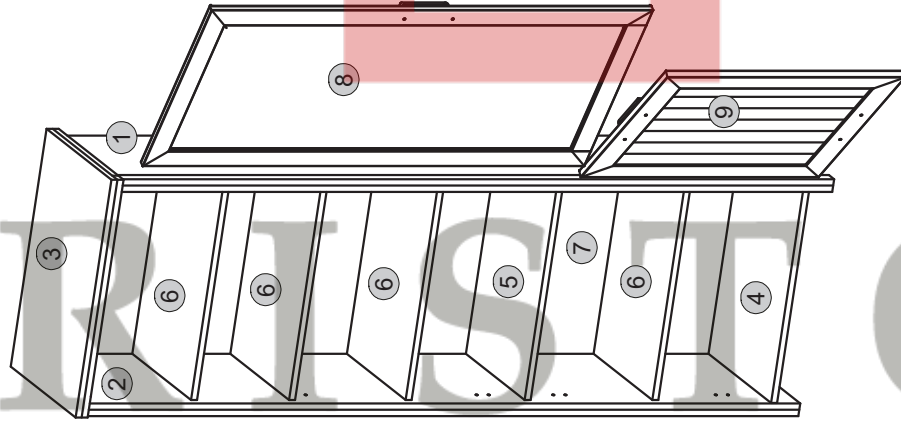
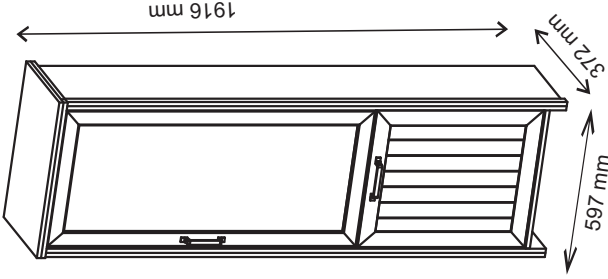
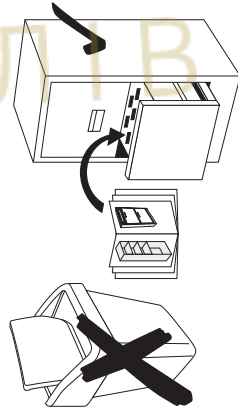
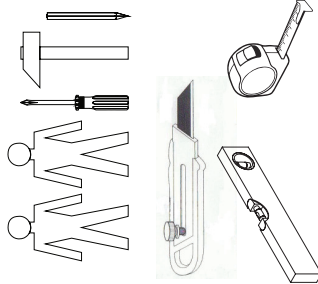
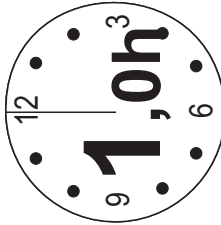



# Instalation manual

## WITRYNA WYSOKA VERNE 1

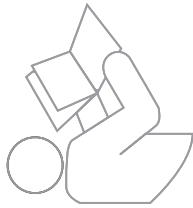


Element symbol	Dimensions	Code	Package
1	1884	1 WIT_1W1D_vagonka.001	1/3
2	1884	1 WIT_1W1D_vagonka.002	1/3
3	598	1 WIT_1W1D_vagonka.003	1/3
4	532	1 WIT_1W1D_vagonka.004	1/3
5	532	1 WIT_1W1D_vagonka.005	1/3
6	532	4 WIT_1W1D_vagonka.006	1/3
7	1849	1 WIT_1W1D_vagonka.009	1/3
8	1063	1 WIT_1W1D_vagonka.010	3/3
9	630	1 WIT_1W1D_vagonka.016	2/3


4x	k1	1x	p17	1x	n14	12x	s4	12x	s2
			φ5x60 mm				φ5		
2x	22285	4x	j8	16x	d1	12x	r16	5x	a143
			M4x3 mm		φ5x17 mm		φ10 mm		
1x	z1	12x	f1	10x	p25	40x	l1	5x	b119
			φ8x30 mm		φ3,5x16 mm		φ15x12 mm #16		




1

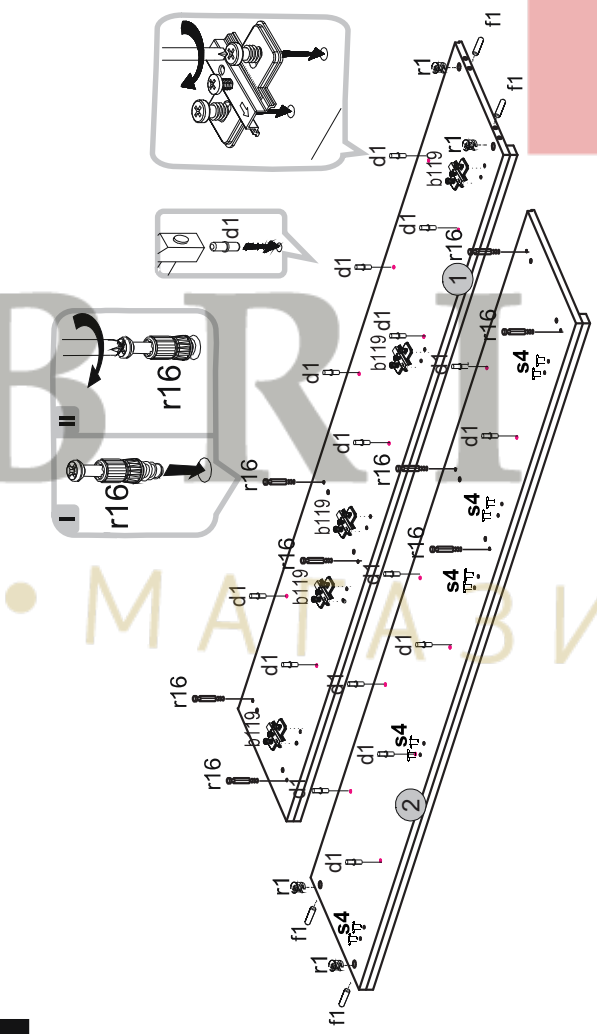


3

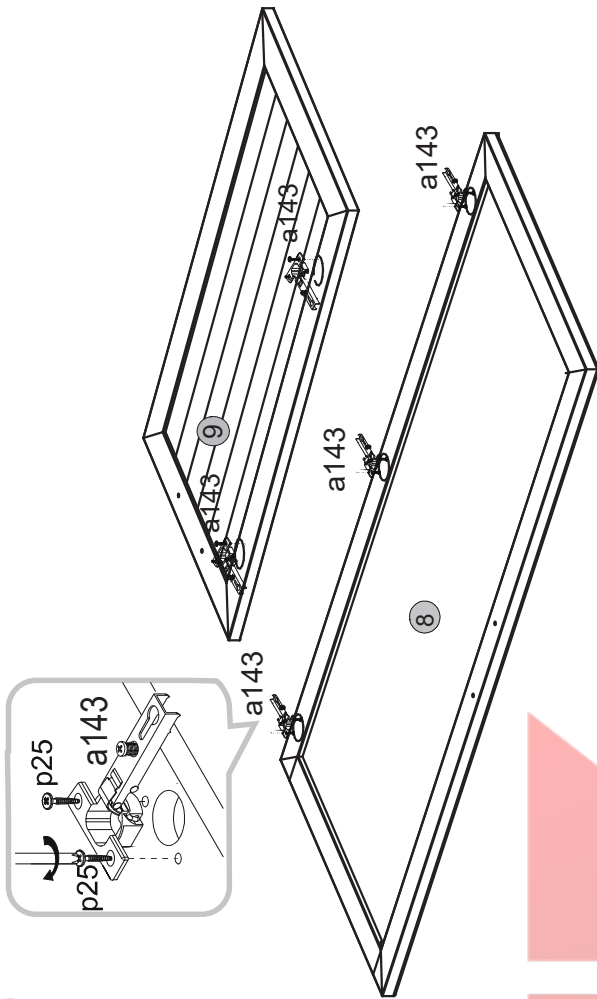


2

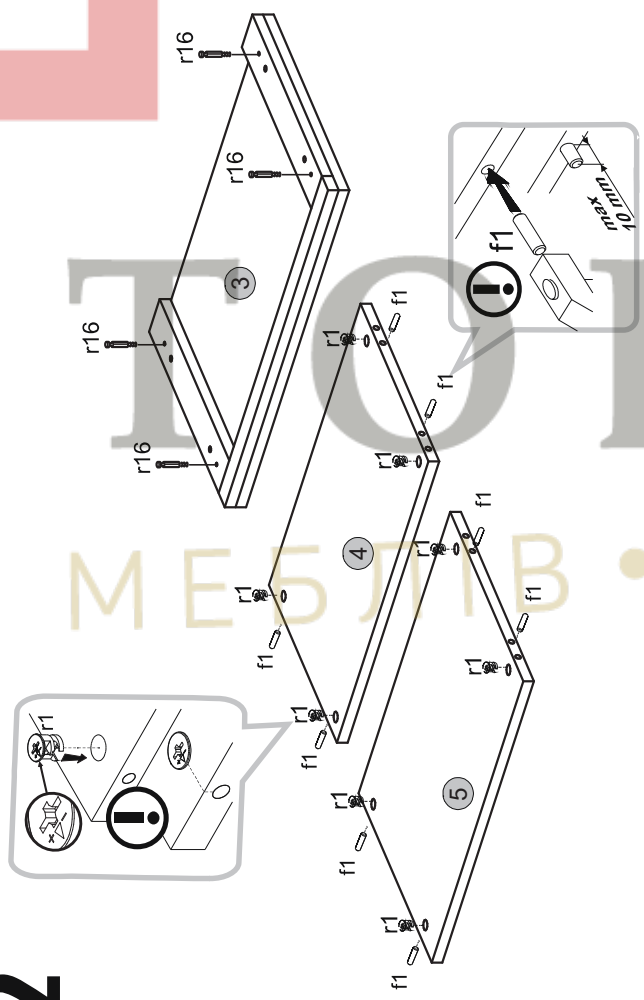


4

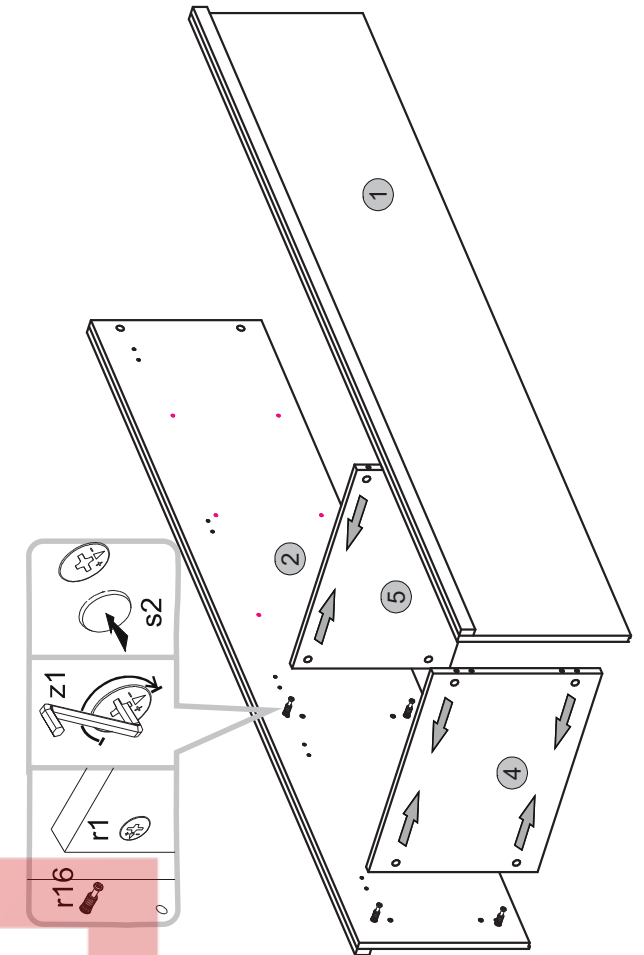

5

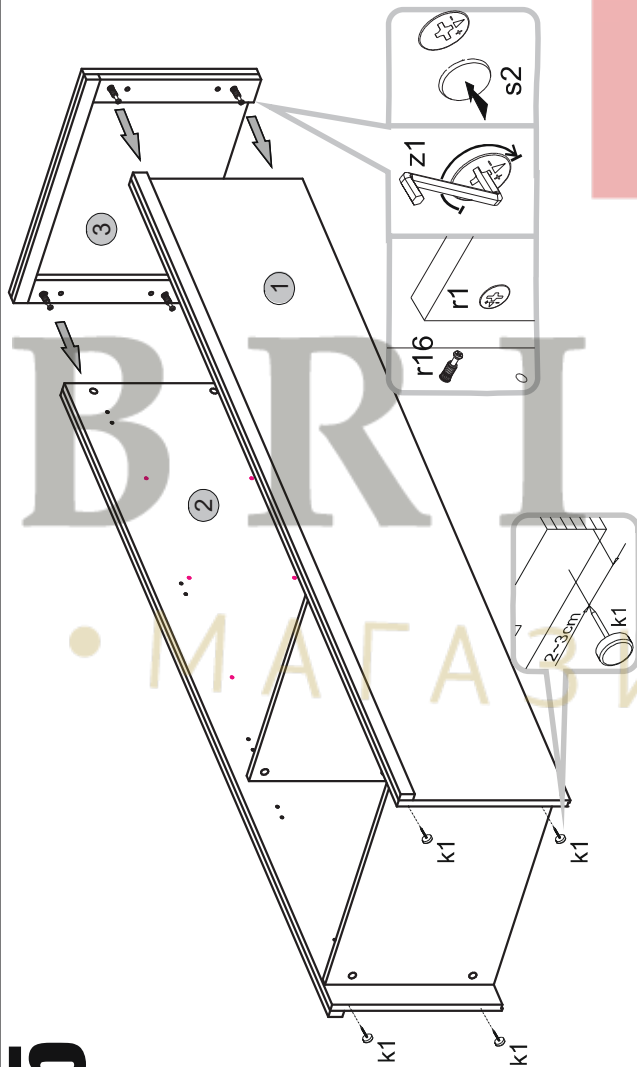


6

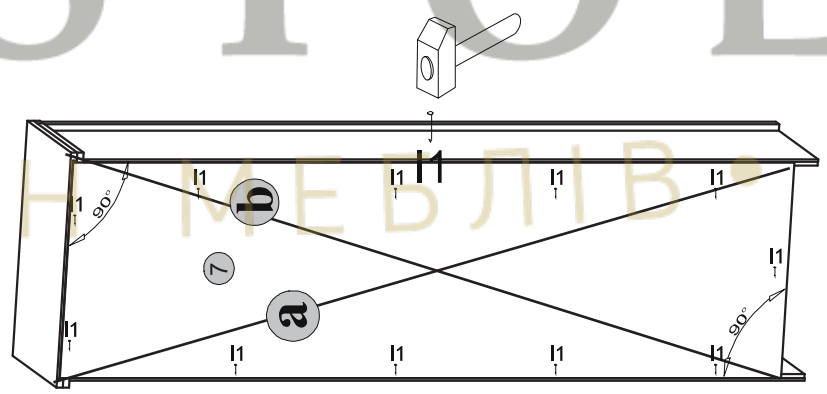

! a=b

7

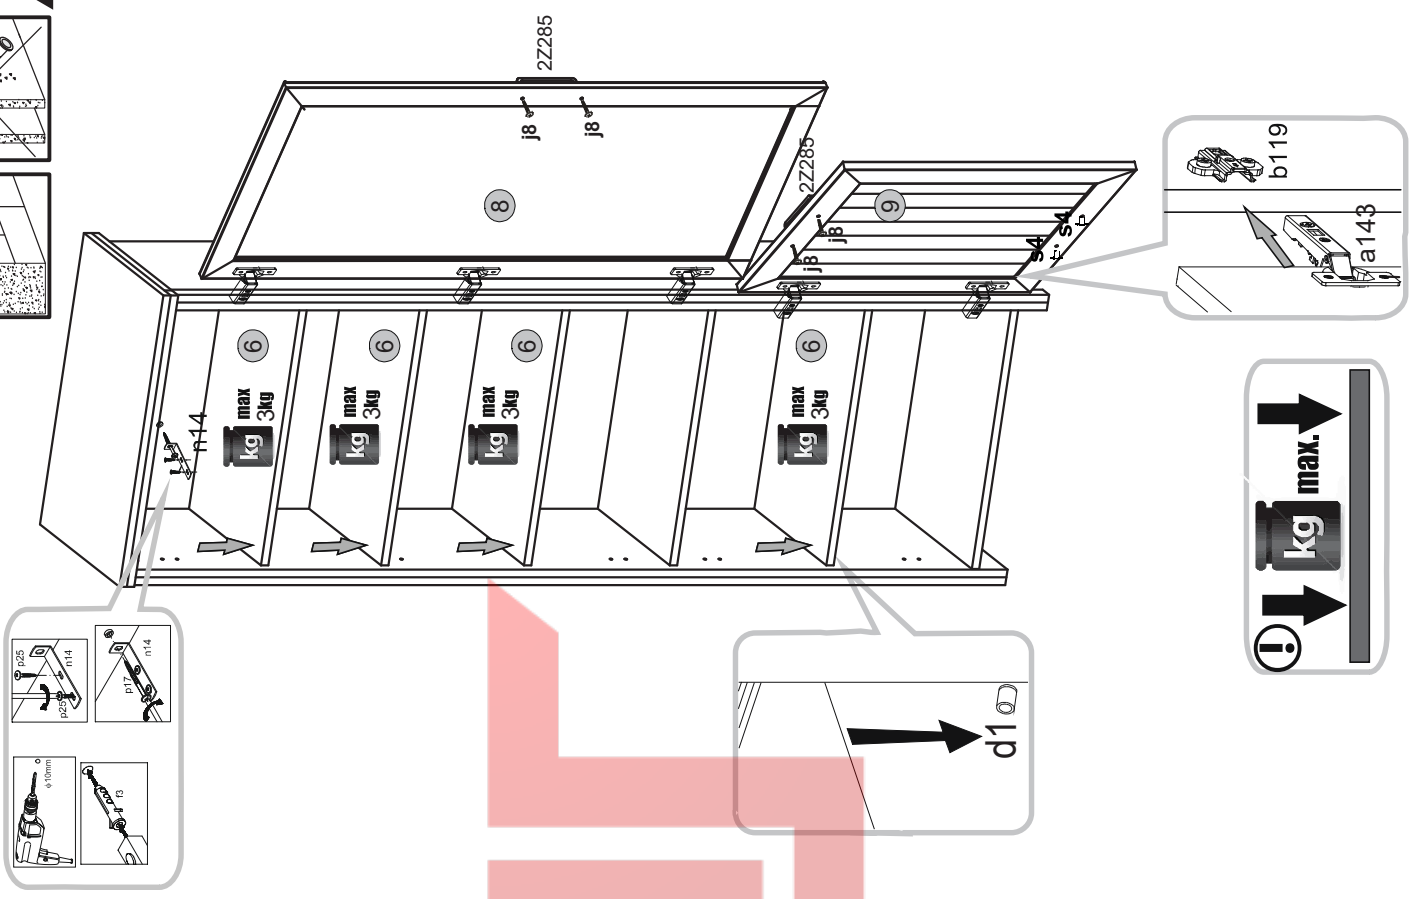

! kg max. ↑ ↓

